



Driver Module Parts

No	Part No.	Description	Qty.
\	N3-MC02-00	Driver Module Assy.	1 Set
	N3-MC02-A1	Fuse Assy.	1 Set
1	① N3-MC02-01	Fuse	1
	② 01-0105-20	Hex Socket Round Head Screw	1
	③ 01-0105-12	Hex Socket Round Head Screw	5
2	N3-MC01-01	Driver Board, Upper	1
3	N6-MC08-09	Driver Board, Lower	1
4	N6-MC08-11	Cooling Pad	1

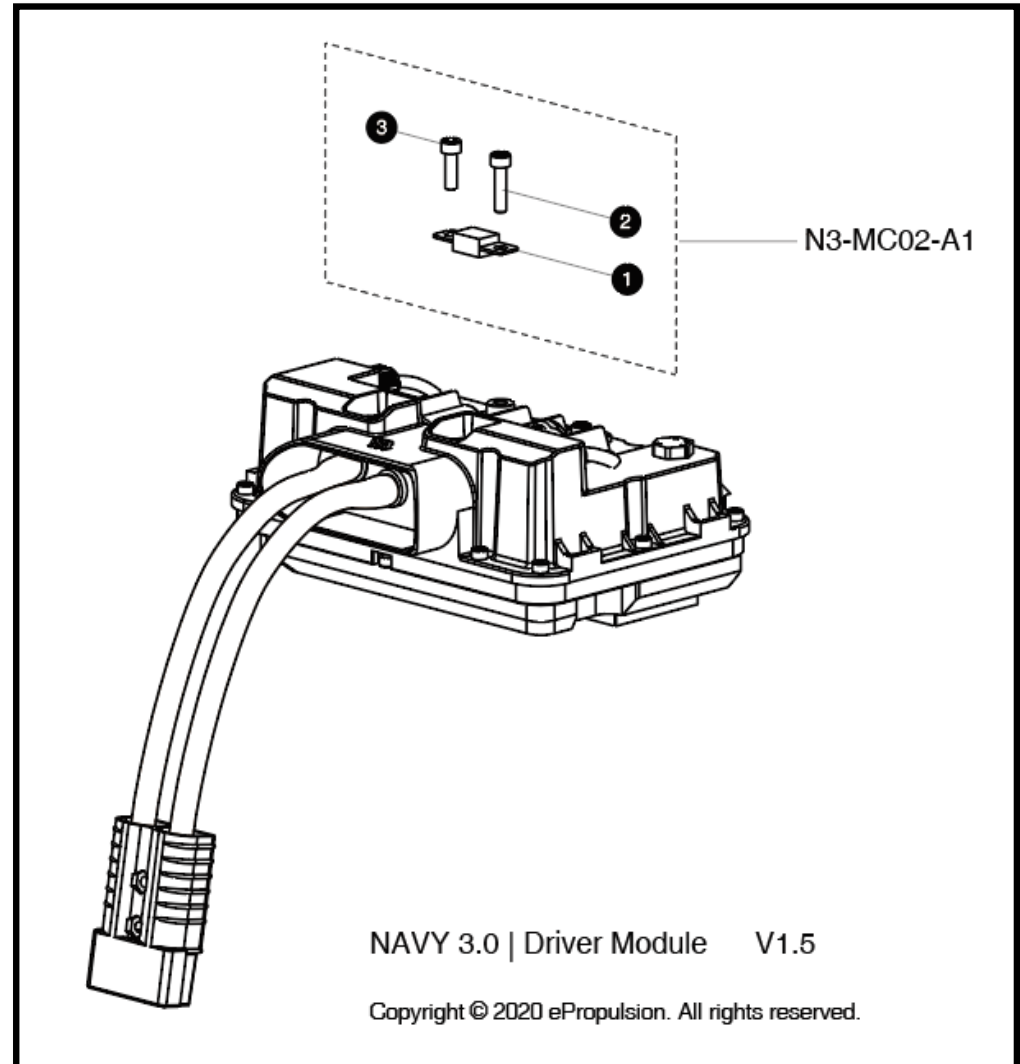


Motor Case Parts

No.	Part No.	Description	Qty.
	N3-MC00-00	3KW Motor Case	1 Set
	N6-MC01-00	Motor Top Case Assy.	1 Set
1	① N6-MC01-01	Motor Top Case	1
	② N6-MC01-A3	Rubber Pad Assy.	1 Set
	a N6-MC01-02	Rubber Pad	1
	b 01-0404-08	Phillip Pan Head Screw M4X8	3
	③ N6-MC01-A1	Motor Top Case, Front Assy.	1 Set
	a N6-MC01-03	Motor Top Case, Front	1
	b 01-0404-08	Phillip Pan Head Screw M4X8	7
	④ N6-MC01-A2	Motor Top Case, Rear Assy.	1 Set
a N6-MC01-04	Motor Top Case, Rear	1	
b 01-0404-08	Phillip Pan Head Screw M4X8	9	
2	N3-MC02-00	Driver Module Assy.	1 Set
3	N3-DM03-00	NAVY 3.0 Wiring Adapter Assy.	1 Set
	01-0105-20	Hex Socket Round Head Screw M5X20	3
	01-1108-10	Hex Socket Half Round Head Screw M8X10	4
	N6-MC04-00	Motor Bottom Case Assy.	1 Set
4	① N6-MC04-A1	Motor Bottom Case, Front Assy.	1 Set
	a N6-MC04-01	Motor Bottom Case, Front	1
	b 01-0106-10	Hex Socket Round Head Screw M6X10	4
	② N6-MC04-A2	Motor Bottom Case, Middle Assy.	1 Set
	a N6-MC04-02	Motor Bottom Case, Middle	1
	b N6-MC04-04	Steering Bolt	1
	c 01-0906-18	Hexalobular Socket Countersunk Head Screw M6X18	6
	d 01-0106-16	Hex Socket Round Head Screw M6X16	4
	③ N6-MC04-A3	Motor Bottom Case, Rear Assy.	1 Set
	a N6-MC04-03	Motor Bottom Case, Rear	1
	b 01-0104-08	Hex Socket Round Head Screw M4X8	2
	c 01-0106-10	Hex Socket Round Head Screw M6X10	2

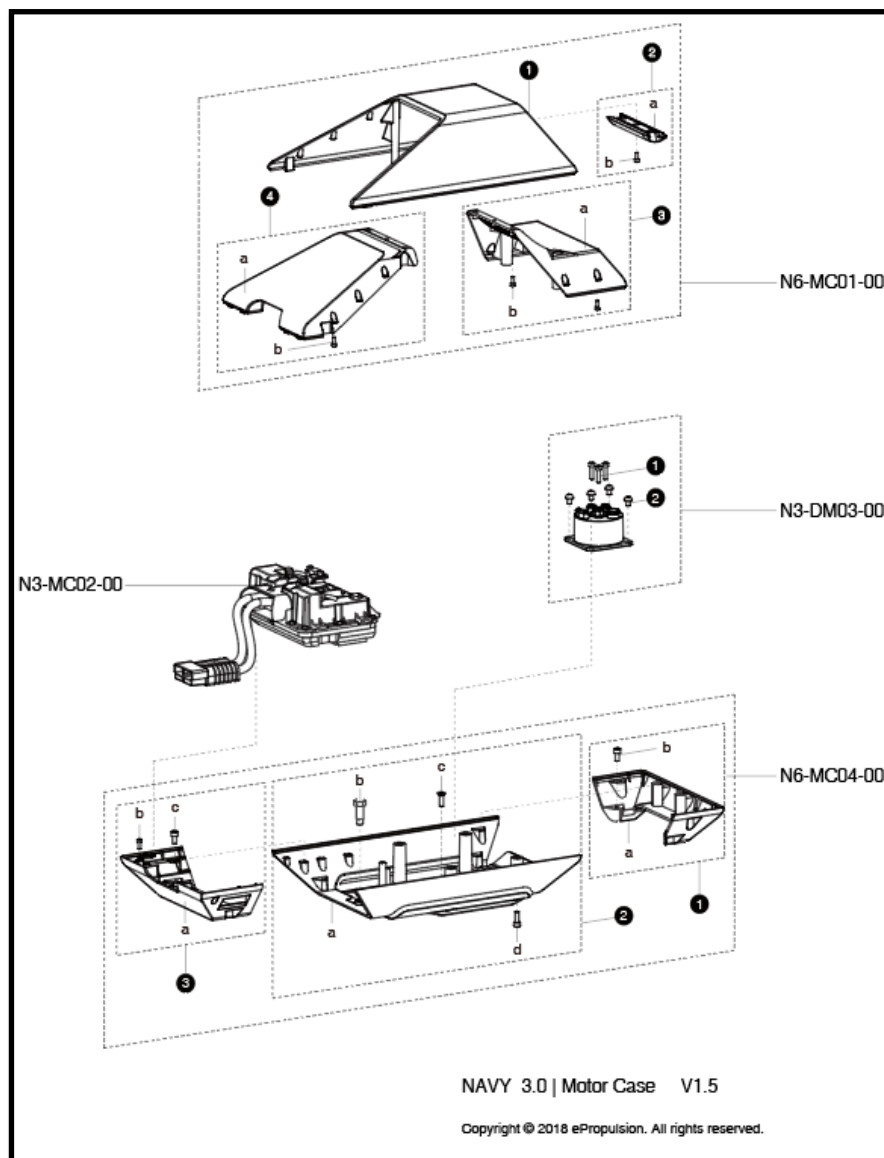


NAVY 3.0 Lower Unit Parts NAVY 3.0

No	Part No.	Description	Qty.
\	N3-LU00-00	NAVY 3.0 Lower Unit	1 Set
\	N3-LU00-L0	NAVY 3.0 Lower Unit Long	1 Set
1	N3-LU01-00	NAVY 3.0 Supporting Tube Assy.	1 Set
	N3-LU01-L0	NAVY 3.0 Supporting Tube Assy. Long	1 Set
①	N6-LU08-01	Motor Case Adapter Gasket	1
2	03-0437-00	Wave Washer D37	1
3	N3-LU02-00	Rotor Assy.	1 Set
4	N3-LU03-00	Bearing Stop Plate Assy.	1 Set
	① 01-0104-12	Hex Socket Round Head Screw M4X12	4
	② N3-LU03-01	Bearing Stop Plate	1
5	N3-LU04-00	Motor End Cap Assy.	1 Set
	① 01-0106-16	Hex Socket Round Head Screw M6X16	2
	② N3-LU04-01	Motor Cap	1
	③ 08-0115-28	Oil Seal TC15X28X7	2
	④ 06-0186-35	O Ring Φ86X3.5	2
6	N3-LU05-00	NAVY 3.0 Propeller	1 Set
	① 02-0112-00	Hex Locknut M12	1
	② 03-0212-24	Plain Washer M12X24X2.5	2
	③ N3-LU05-01	Propeller Blade	1
	④ N6-LU02-02	Propeller Pin 5X40	1
7	N6-LU01-00	NAVY Anode	1 Set
	① 01-0106-16	Hex Socket Round Head Screw M6X16	1
	② 03-0306-00	Spring Washer M6	1
	③ N6-LU01-01	Anode	1

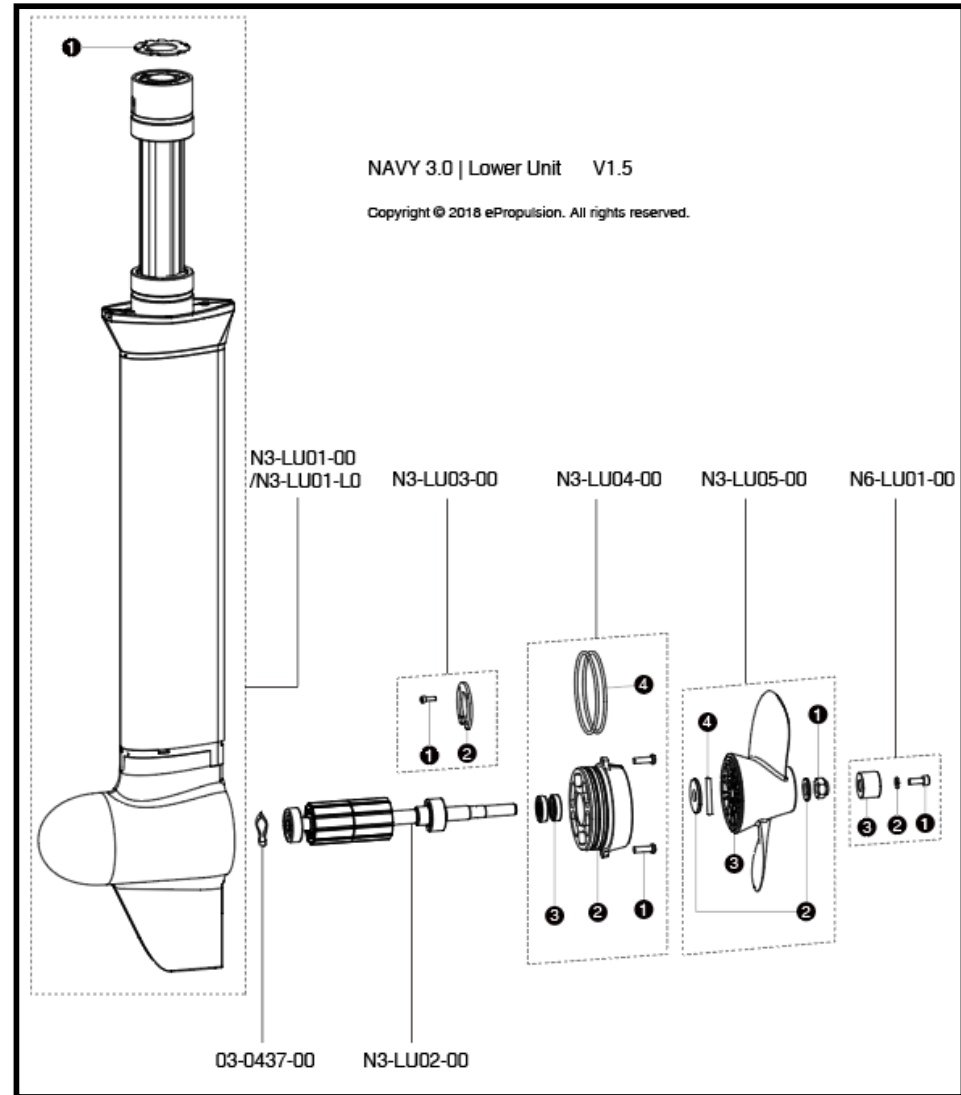

Transom Bracket Parts

No	Part no.	Description	Qty.
\	N6-TB00-00	Transom Bracket	1 Set
1	N6-TB01-01	Clamp Nut	2
2	03-0123-42	Nylon Washer M23X42X3	2
3	N6-TB02-00	Bracket Clamp Left Assy.	1 Set
	① N6-TB02-A1	NAVY Clamp Tightening Handle Assy.	1 Set
	a 04-0206-26	Rolled Spring Pin Φ6X26	1
	b N6-TB02-07	Tightening Handle for Clamp	1
	② N6-TB02-08	Tightening Bolt M14 for Clamp	1
	③ N6-TB02-06	Transom Clamping Plate	1
	④ N6-TB02-05	Step Bolt for Transom Clamping Plate	1
4	⑤ N6-TB02-A2	Bracket Clamp Left Assy.	1
	a N6-TB02-A3	Tilt Release Button Assy.	1 Set
4	N6-TBA1-00	Clamp Main Part Assy.	1 Set
5	① N6-TB03-01	Bushing for Rotational Axis	2
	N6-TB05-00	Clamp Cover Front Assy.	1 Set
6	01-0106-16	Hex Socket Round Head Screw M6X16	1
6	N6-TB06-01	Steering Tube	1
7	N6-TB07-00	Bracket Clamp Right Assy.	1 Set
	① N6-TB07-01	Bracket Clamp Right	1
8	N6-TB08-A1	Double-End Stud Assy.	1 Set
9	N6-TB11-00	NAVY Clamp Anode	2 Set
10	NE-TB01-00	Steering Tube Nut Right	1 Set
11	NE-TB02-00	Steering Tube Nut Left	1 Set

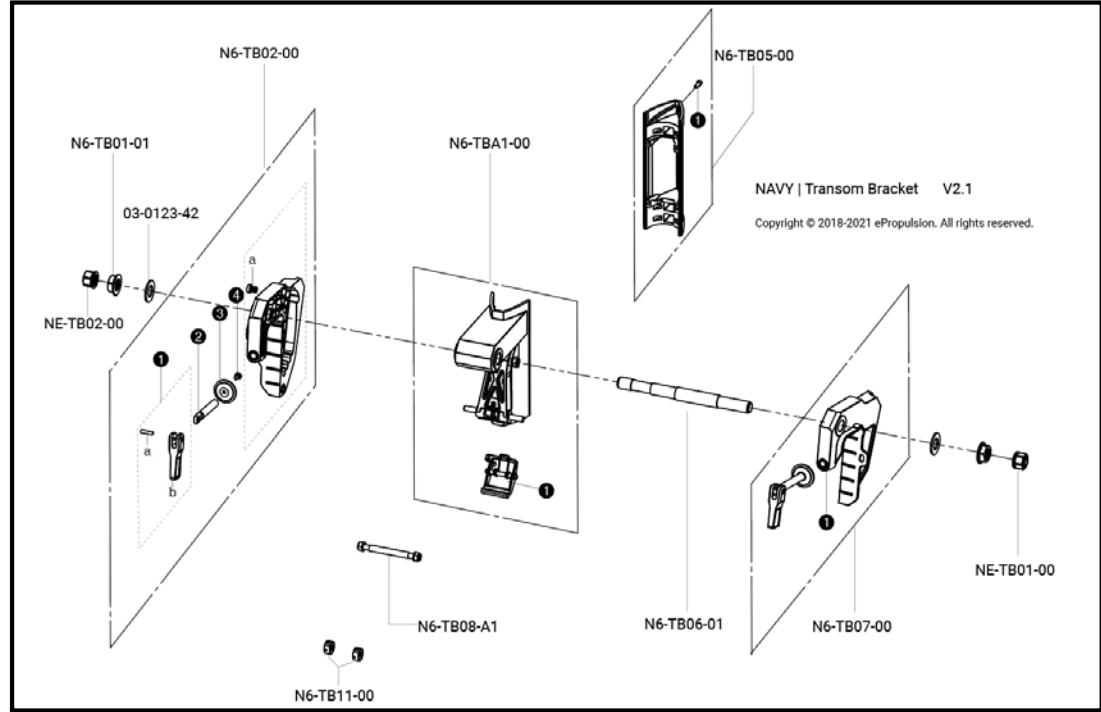

Other Accessories

NO	PART NO.	DESCRIPTION	QTY
1	00-0800-01	Link Arm	1 Set
2	N6-AP00-00	NAVY Anticavitation Plate	1 Set
3	00-0601-01	Communication Cable 5m	1 PC
4	S1-TH02-00	Kill Switch Assy.	1 Set
5	N6-MS00-00	Main Switch Cable	1 Set
	① 09-0501-00	Anderson Connector	1 Set
6	00-0602-01	Battery Bridging Cable	1 Set
7	00-0601-03	Communication Extension Cable 5m	1 Set
8	S1-PD01-00	Remote Control Program Downloader	1 Set
9	N6-PD01-00	NAVY Driver Program Downloader	1 Set
10	N6-PD02-00	NAVY Control Program Downloader	1 Set
11	N3-JG01-00	Jig for Removing Motor Cover	1 Set
12	00-0601-04	Short communication cable 0.5m	1 Set
13	P1-JG01-00	Jig for Removing Propeller	1 Set
14	SR-CM03-00	Stable Nut	1 Set
15	SR-CM04-00	Link Arm Lock	1 Set

Only applicable to NAVY 3.0