



Motor Case Parts

No	Part No.	Description	Qty.
\	NE-MD00-00	<b>NAVY Evo Motor Case</b>	<b>1 Set</b>
1	NE-MD01-00	<b>Motor Top Case .</b>	<b>1 Set</b>
2	NE-MD04-00	N6E Driver Sealing Cover	1
3	01-3404-14	Hex Socket Round Head Combination Screw M4×14	19
4	P6-MD10-00	Fuse 150A	1
5	01-0105-16	Hex Socket Round Head Screw M5X16	10
6	01-0105-20	Hex Socket Round Head Screw M5X20	6
7	10-0112-15	Vent M12X1.5	1
8	NE-MD06-01	GPS Module	1
9	01-0303-06	Phillip Pan Head Tapping Screw M3X6	3
	<b>NE-MD31-00</b>	<b>Driver Board Assy.</b>	<b>1 Set</b>
①	P6-MD14-00	N6E Driver Upper Board	1
②	P6-MD15-00	N6E Driver Lower Board	1
③	P6-MD17-00	Insulating particles	16
④	NE-MD08-00	Driver Fixing Screw Assy.	1 Set
a	01-3404-22	Hex Socket Round Head Combination Screw M4×22	6
b	01-0403-08	Phillip Pan Head Screw M3X8	6
c	01-3404-18	Hex Socket Round Head Combination Screw M4×18	10
	06-0114-20	O Ring Φ14X2.0	4
d	P6-MD16-00	Single Head Hexagonal Column	6
	<b>NE-MD11-00</b>	<b>Motor Bottom Case Assy.</b>	<b>1 Set</b>
①	NE-MD12-00	N6E Motor Bottom Case	1
②	NE-MD13-00	N6E Decorative Cover	1
③	NE-MD14-00	N6E Tiller Shaft	1
12	NE-MD30-00	N6E RS485 Communication Line	1
	<b>NE-MD15-00</b>	<b>Dirver Cooling Module Assy.</b>	<b>1 Set</b>
①	NE-MD16-00	N6E Fan Baffle	1
②	01-0906-25	Hexalobular Socket Countersunk Head Screw M6×25	4
	NE-MD17-00	N6E Long Steering Bolt	1
	02-0110-00	Hex Locknut M10	1
③	NE-MD18-00	N6E Fan	1
④	01-3004-35	Phillip Pan Head with Gasket Screw M4x35	4
	01-0106-16	Hex Sockt Round Head Screw M6X16	6
	<b>NE-MD19-00</b>	<b>Power Cable Assy.</b>	<b>1 Set</b>
①	NE-MD20-00	N6E Driver Power Cable	1
②	NE-MD21-00	Bellows	1
③	NE-MD22-00	N6E Power Cable Protector	1
④	NE-MD23-00	N6E Bellows Fixture	1
⑤	NE-MD24-00	N6E Power Cable Fixture Upper	1
⑥	NE-MD25-00	N6E Power Cable Fixture Lower	1
⑦	01-0104-12	Hex Socket Round Head Screw M4X12	2
⑧	01-0104-30	Hex Socket Round Head Screw M4X30	2
	NE-MD29-00	N6E Integrated Communication Cable 5m	1
	<b>NE-MD26-00</b>	<b>Motor Bottom Case Sealing Assy.</b>	<b>1 Set</b>
①	01-0104-22	Hex Socket Round Head Screw M4X22	6
②	NE-MD27-00	N6E Motor Case Adapter Seal Flange	1
③	06-0145-03	O Ring Φ45x3	1
④	NE-MD28-00	N6E Motor Case Adapter Seal Pad	1
16	01-0906-25	Hexalobular Socket Countersunk Head Screw M6×25	6

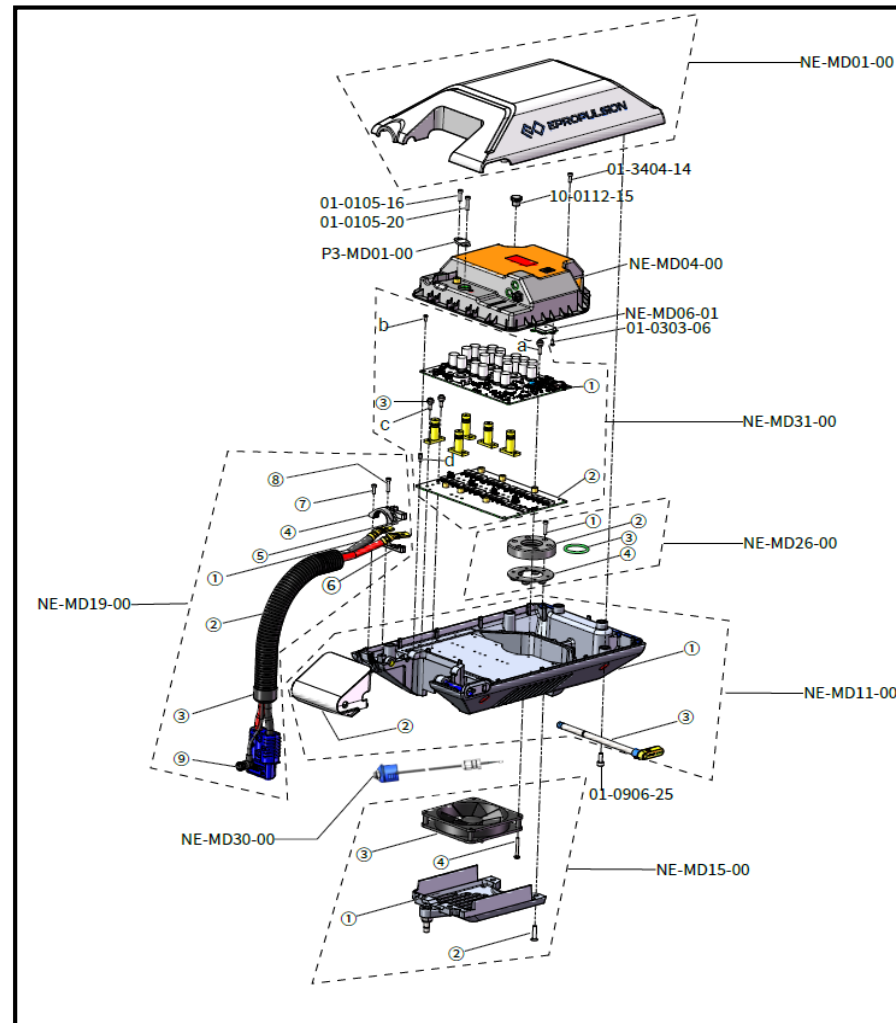


*NAVY 6.0 Evo Lower Unit Parts*

Nc	Part No.	Description	Qty.
1	<b>N6-LU01-00</b>	<b>NAVY Anode</b>	<b>1 Set</b>
	① 01-0106-16	Hex Socket Round Head Screw M6X16	1
	② 03-0306-00	Spring Washer M6	1
2	③ N6-LU01-01	Anode	1
	<b>N6-LU02-00</b>	<b>NAVY 6.0 Low Pitch Propeller</b>	<b>1Set</b>
	<b>N6-LU12-00</b>	<b>NAVY 6.0 High Pitch Propeller</b>	<b>1Set</b>
	① 02-0112-00	Hex Locknut M12	1
	② 03-0212-24	Plain Washer M12X24X2.5	1
3	③ N6-LU12-01	High Pitch Propeller	1
	N6-LU02-01	Low Pitch Propeller	1
	④ N6-LU02-02	Propeller Pin 5X40	1
	⑤ 03-0216-00	Plain Washer M16X30X3	1
	NE-LU21-00	N6E Thrust Washers	
	<b>P6-M006-00</b>	<b>Motor End Cap Assy.</b>	<b>1Set</b>
	① P6-M010-00	N6E Oil Seal Cover	1
	② 08-2547-07	Oil Seal TC25X47X7	2
4	③ 01-0108-20	Hex Socket Round Head Screw M8X20	3
	④ P6-M007-00	Red Steel Paper Gasket 8×14×1	3
	⑤ 01-3104-12	Hex Socket Round Head Screw M4X12	4
	⑥ P6-M008-00	N6E Motor End Cap	1
	⑦ 06-0199-93	O Ring Φ117X4	2
	⑧ P6-M009-00	N6E Oil Seal Washer	1
	<b>NE-LU05-00</b>	<b>Rotor Assy.</b>	<b>1 Set</b>
	① 01-0106-16	Hex Socket Round Head Screw M6X16	6
5	② NE-LU06-00	N6E Bearing Lock Ring	1
	③ NE-LU07-00	Wave Washer D50	1
5	<b>NE-LU08-S0</b>	<b>N6E Motor Base Assy. Shortshaft</b>	<b>1 Set</b>
	<b>NE-LU08-L0</b>	<b>N6E Motor Base Assy. Longshaft</b>	<b>1 Set</b>
	① P6-M013-00	<b>NAVY Evo Andoe</b>	1 Set
a	01-0404-12	Hex Socket Round Head Screw M4X12	2

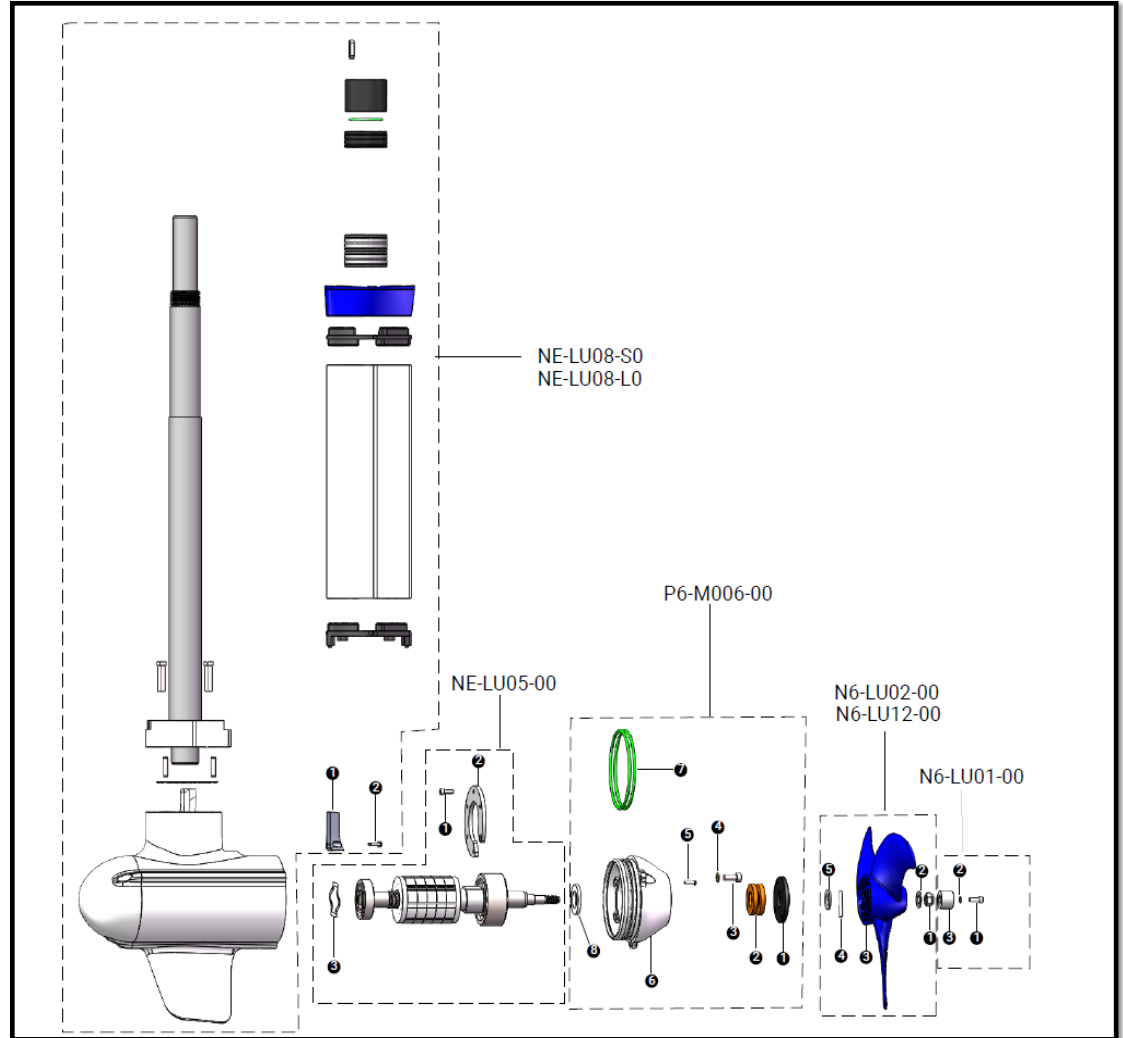

*Transom Bracket Parts*

No	Part no.	Description	Qty.
\	<b>NE-TB00-00</b>	<b>Transom Bracket</b>	<b>1 Set</b>
1	N6-TB01-01	Clamp Nut	2
2	03-0123-42	Nylon Washer M23X42X3	2
	<b>N6-TB02-00</b>	<b>Bracket Clamp Left Assy.</b>	<b>1 Set</b>
①	<b>N6-TB02-A1</b>	<b>NAVY Clamp Tightening Handle Assy.</b>	<b>1 Set</b>
a	04-0206-26	Rolled Spring Pin Φ6X26	1
b	N6-TB02-07	Tightening Handle for Clamp	1
②	N6-TB02-08	Tightening Bolt M14 for Clamp	1
③	N6-TB02-06	Transom Clamping Plate	1
④	N6-TB02-05	Step Bolt for Transom Clamping Plate	1
⑤	<b>N6-TB02-A2</b>	<b>Bracket Clamp Left Assy.</b>	<b>1</b>
a	N6-TB02-A3	Tilt Release Button Assy.	1 Set
	<b>NE-TB04-00</b>	<b>Clamp Main Part Assy.</b>	<b>1 Set</b>
①	NE-TB03-00	Bushing for Rotational Axis	2
②	NE-TB06-00	Hook Assy. Evo	1 Set
③	03-1330-39	Teflon Washer M30x39x2	2
	<b>N6-TB05-01</b>	<b>Clamp Cover Front Assy.</b>	<b>1 Set</b>
①	01-0106-25	Hex Socket Round Head Screw M6X25	1
6	N6-TB06-01	Steering Tube	1
7	<b>N6-TB07-00</b>	<b>Bracket Clamp Right Assy.</b>	<b>1 Set</b>
①	N6-TB07-01	Bracket Clamp Right	1
	<b>N6-TB08-A1</b>	<b>Double-End Stud Assy.</b>	<b>1 Set</b>
①	02-0110-00	Hex Locknut M10	2
②	03-0210-18	Plain Washer M10X18X1.6	4
③	N6-TB08-01	Double-End Stud	1
9	N6-TB11-00	NAVY Clamp Anode	2 Set
10	NE-TB05-00	Anti-grounding Module Assy.	1 Set
11	NE-TB01-00	Steering Tube Nut Right	1 Set
12	NE-TB02-00	Steering Tube Nut Left	1

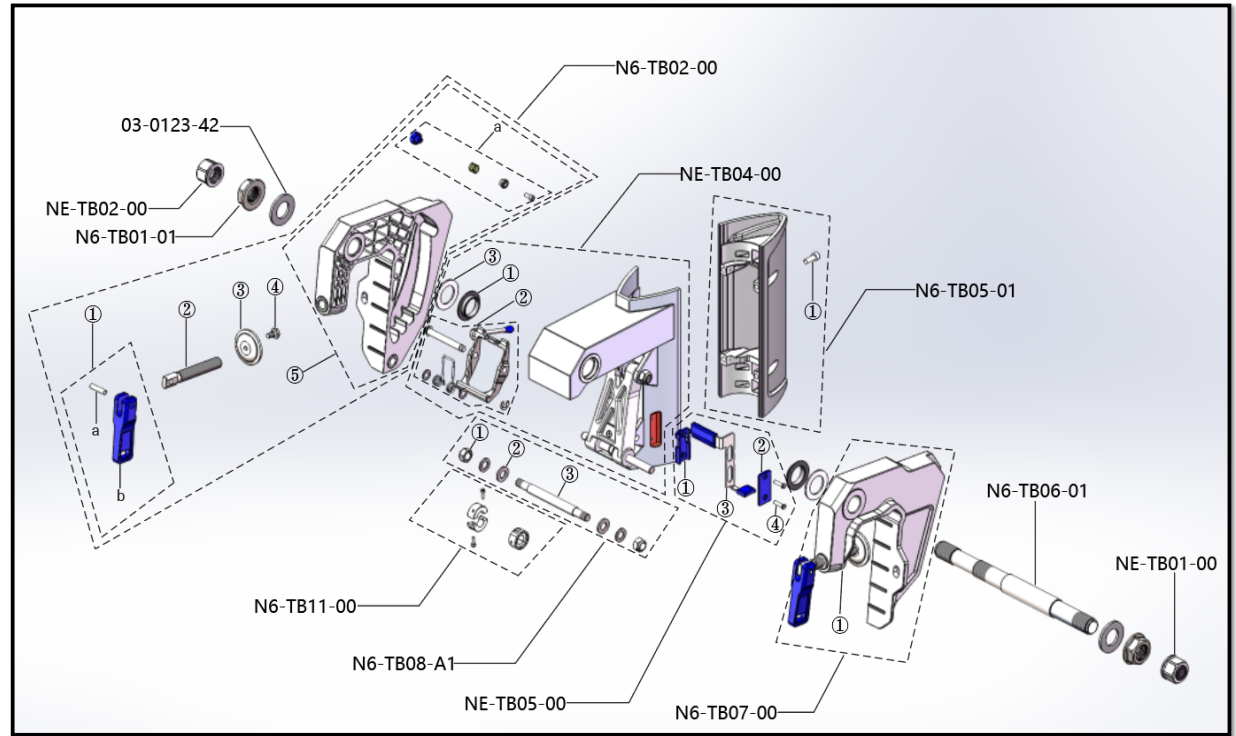

***Other Accessories***

<b>NO</b>	<b>PART NO.</b>	<b>DESCRIPTION</b>	<b>QTY</b>
1	00-0800-01	Link Arm	1 Set
2	00-0601-01	Communication Cable 5m	1 PC
3	S1-TH02-00	Kill Switch Assy.	1 Set
4	<b>N6-MS00-00</b>	<b>Main Switch Cable</b>	<b>1 Set</b>
	① 09-0501-00	Anderson Connector	1 Set
5	00-0601-03	Communication Extension Cable 5m	1 Set
6	00-0601-04	Short communication cable 0.5m	1 Set
7	P1-JG01-00	Jig for Removing Propeller	1 Set
8	SR-CM04-00	Link Arm Lock	1 Set
9	N6-LU01-E0	NAVY 6.0 Evo AL Propeller	1 Set
10	P1-AC03-E0	Evo_Bootloader Downloader	1 Set
11	N6-AP00-E0	NAVY 6.0 Evo Anticavitation Plate	1 Set