



Motor Parts

No	Part no.	Description	Qty.
\	SE-M001-S0	Evo Motor Main Part Shortshaft w/o Propeller	1 Set
\	SE-M001-L0	Evo Motor Main Part Longshaft w/o Propeller	1 Set
1	SE-M002-S0	Evo Motor Base Assy. Shortshaft	1 Set
	SE-M002-L0	Evo Motor Base Assy. Longshaft	1 Set
	SE-M003-S0	Evo Power Cable Short	1 Set
	SE-M003-L0	Evo Power Cable Long	1 Set
	SP-M004-00	Power Cable Connector Cap	1
2	SP-BC01-00	Plus Motor Cover	1
①	01-0104-10	Hex Socket Round Head Screw M4X10	2
3	06-0190-19	O Ring φ90x1.9	2
	SP-M006-00	Plus Rotor Assy.	1 Set
4	① SP-M007-00	Plus Rotor	1 Set
	② 07-0260-01	Deep Groove Ball Bearing 6001ZZ	1
	SP-M008-00	Driver Cooling Block Set	1 Set
5	① 01-0104-12	Hex Socket Round Head Screw M4X12	8
	② 01-0905-12	Hexalobular Socket Countersunk Head Screw M5X12	1
	③ SP-M009-00	Rotor Axial Limit Ring	1
	④ 07-0352-00	Double-Row Angular Contact Ball Bearing 5200ZZ	1
	⑤ SP-M010-00	Driver Cooling Block	1
	⑦ SP-M021-00	Bearing Lock Ring	1
	6	SP-M016-00	Three-phase Line Pass Line Sleeve
7	08-1222-05	Oil Seal TC12X22X5	2
	SP-M014-01	Oil Seal Cover Set V1.0	1 Set
8	① SP-M015-00	Oil Seal Cover	1
	② SP-M015-01	Oil Seal Cover V1.0	1
	③ 01-0404-08	Phillip Pan Head Screw M4X8	4
	SP-M013-00	SPIRIT 1.0 Plus Motor Anode	1 Set
9	① 03-0304-00	Spring Washer M4	1
	② 01-0104-10	Hex Socket Round Head Screw M4X10	1
	SE-M004-00	Evo Driver Assy. Evo	1 Set
10	① 01-0103-10	Hex Socket Round Head Screw M3X10	4
	② 01-0103-05	Hex Socket Round Head Screw M3X5	5
	③ SE-M005-00	Evo Driver	1
	SP-M019-00	Plus Driver Silicone Thermal Pad	1
11	SP-M020-00	Power Cable Pass line Rubber Part	1
	S1-M001-00	SPIRIT 1.0 Propeller	1 Set
12	① 02-0110-00	Hex Locknut M10	1
	② 03-0510-00	Disc Washer M10	1
	③ 04-0103-25	Pin Φ3X25	1
	④ 03-0210-20	Plain Washer M10X20X2.0	1
	SP-M012-00	SPIRIT 1.0 Plus Shaft Anode	1 Set
13	① 03-0305-00	Spring Washer M5	1
	② 01-0105-12	Hex Socket Round Head Screw M5X12	1
14	SP-M022-00	Stream Deflector Rubber Upper	1
15	SP-M023-00	Stream Deflector Upper Lock	1

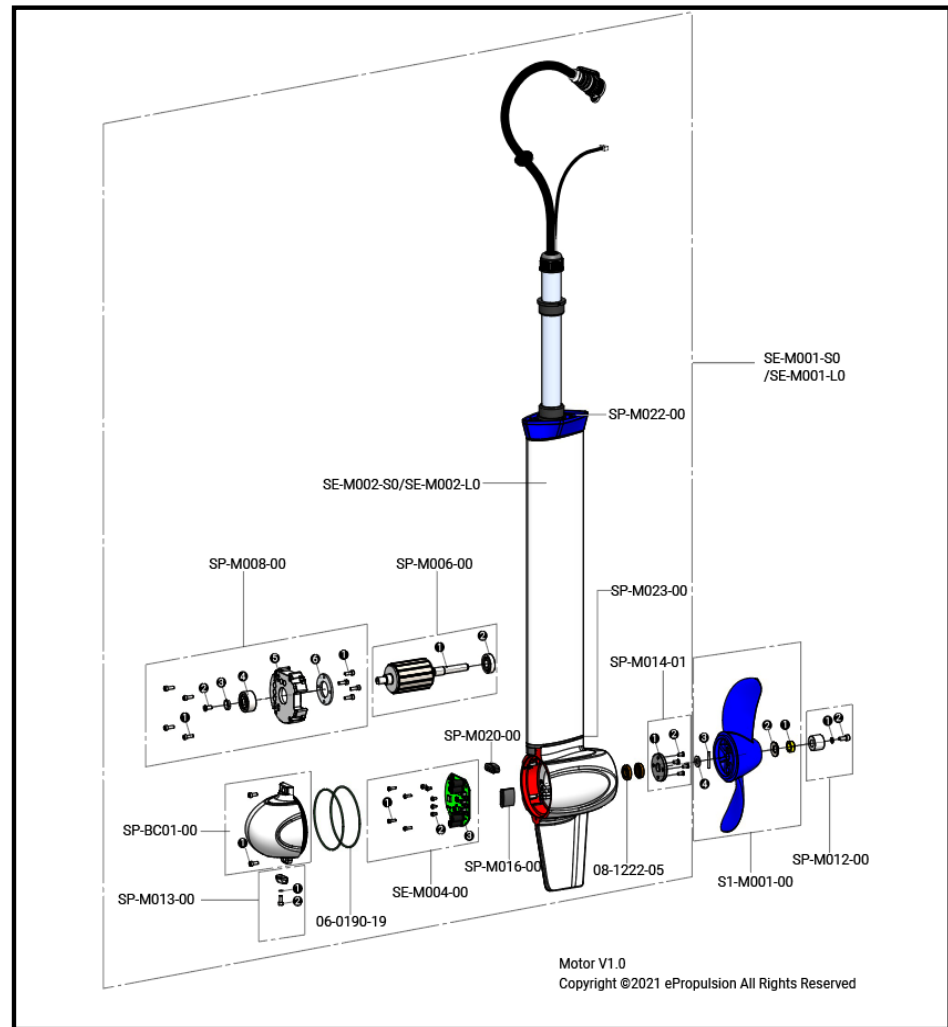


*Battery Parts*

No	Part no.	Description	Qty.
1	<b>SP-B001-00</b>	<b>Plus Discharge Connector Assy.</b>	<b>1 Set</b>
	S1-B002-03	Discharge Connector Cap	1
	SP-B002-00	Plus Discharge Connector	1 Set
2	SP-B011-00	BMS Flat Cable (Plus)	1 Set
3	<b>SP-B003-00</b>	<b>Plus Charge Connector Assy.</b>	<b>1 Set</b>
	S1-B001-03	Charge Connector Cap	1
	SP-B004-00	Plus Charge Connector	1 Set
4	<b>S1-B004-00</b>	<b>Battery Top Case Assy.</b>	<b>1 Set</b>
	S1-B005-00	Battery Lock Assy.	1 Set
	S1-B003-00	Charge Indicator Assy.	1 Set
5	<b>SP-B005-00</b>	<b>Plus BMS Assy.</b>	<b>1 Set</b>
	① 01-1504-10	Phillip Truss Head Tapping Screw M4X10	4
6	<b>SP-B006-00</b>	<b>Plus Battery Cell Assy.</b>	<b>1 Set</b>
7	<b>S1-B009-01</b>	<b>Battery Sealing Ring</b>	<b>1 Set</b>
8	<b>S1-B010-00</b>	<b>Battery Bottom Case Assy.</b>	<b>1 Set</b>
	① 01-1504-16	Phillip Truss Head Tapping Screw M4X16	24

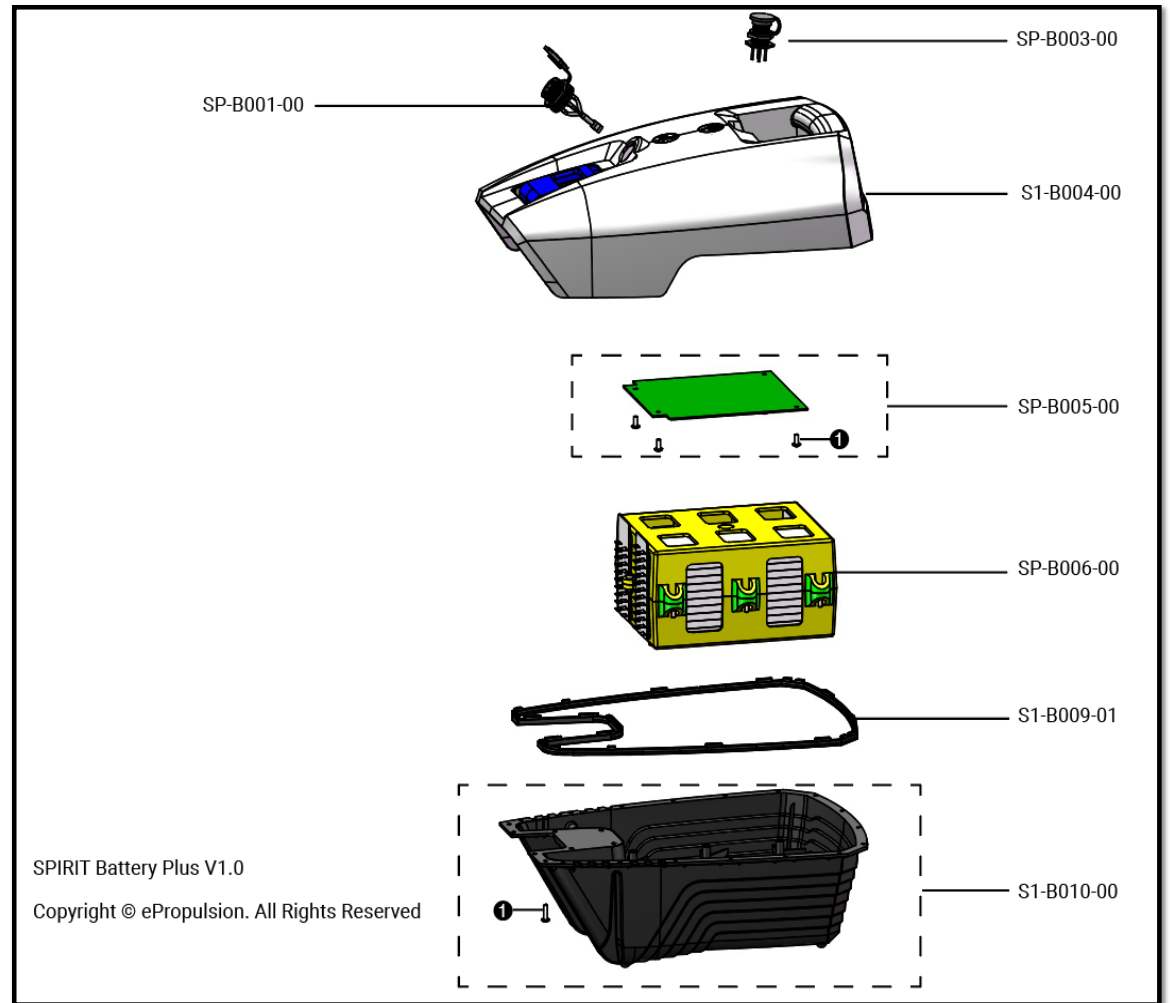


*Tiller Handle Parts*

No	Part no.	Description	Qty.
\	SE-BB00-00	Battery Base Assy. Evo	1 Set
1	SE-BB01-00	Battery Base Left Evo	1
	SE-BB02-00	Battery Base Right Assy. Evo	1 Set
2	① 01-0104-35	Hex Socket Round Head Screw M4X35	2
	② 01-0706-08	Set Screw M6X8	1
	③ 01-0106-25	Hex Socket Round Head Screw M6X25	2
3	SE-BB03-00	Evo Tiller Shaft	1
	SE-BB04-00	Communication Module Assy. Evo	1 Set
4	① SE-BB10-00	Communication Module Cover Assy. Evo	1
	② SE-BB05-00	Evo Communication Transfer Board	1
	③ 01-3400-01	Phillip Pan Head Washer Flat Tail Tapping Screw M2.6X6	1
	④ 06-0165-15	O Ring $\Phi$ 65x1.5	1
	⑤ SE-BB07-00	Communication Module Sealing Cover Evo	1
	⑥ SE-BB06-00	Screw Plug M5	1
5	01-1503-12	Phillip Truss Head Tapping Screw M3X12	1
6	SE-BB08-00	Evo Steering Lock Pin	1

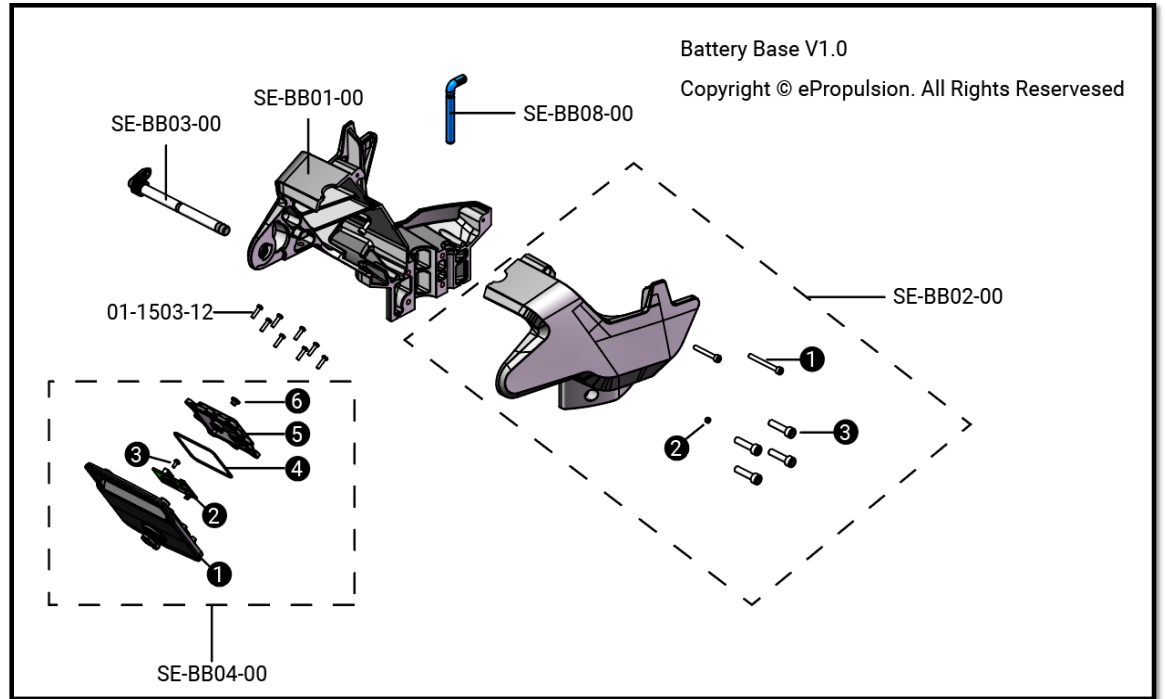


*Remote Kit Parts*

No	Part no.	Description	Qty.
1	<b>SE-R901-00</b>	<b>Steering Tube Assy. Evo</b>	<b>1</b>
	(1) SE-R902-00	Steering Tube Bracket Left Evo	1
	(2) SE-R903-00	Steering Tube Bracket Right Evo	1
	(3) 01-0104-12	Hex Socket Round Head Screw M4X12	4
	(4) 03-0304-00	Spring Washer M4	4
	(5) 03-0204-07	Plain Washer M4X7X1.0	4
	(6) SE-R904-00	Steering Tube Evo	1
(7) SE-R905-00	Link Arm Evo	1	
2	SE-R906-00	Remote Cover Assy. Evo	1
3	SE-R910-00	M8 Butterfly Nut Assy. Evo	2 Set
4	03-0208-A1	Plain Washer M8X16X1.6	4
5	NE-TB01-00	Steering Tube Nut Right	1 Set
6	NE-TB02-00	Steering Tube Nut Left	1

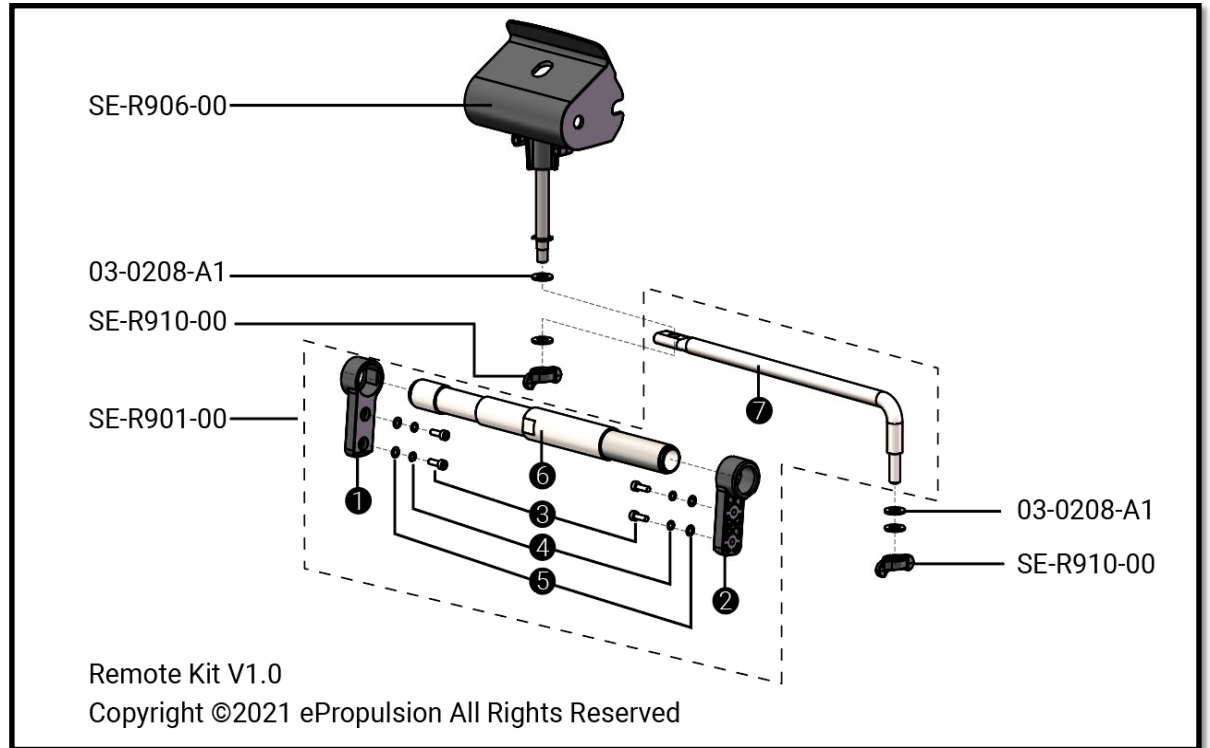

*Transom Bracket Parts*

No	Part no.	Description	Qty.
\	<b>SE-TB04-00</b>	<b>Transom Clamp</b>	<b>1 Set</b>
1	SE-TB05-00	Bracket Clamp Left Assy. Evo	1 Set
	<b>S1-TB11-00</b>	<b>Bracket Rotational Axis Assy.</b>	<b>1 Set</b>
2	① 02-0106-00	Hex Locknut M6	2
	② 03-0706-00	Hard Nylon Washer M6	2
3	<b>S1-TB04-00</b>	<b>Trim Pin &amp; Pull Ring Assy.</b>	<b>1 Set</b>
	① S1-TB08-01	Pull Ring for Beaching Pin Φ20	1
	<b>S1-TB09-00</b>	<b>Steering Resistance Block Assy.</b>	<b>1 Set</b>
4	① S1-TB09-01	Resistance Block Base	1
	② S1-TB09-02	Resistance Block Cover	1
	③ 01-0304-16	Phillip Pan Head Tapping Screw M4X16	2
5	<b>S1-TB01-00</b>	<b>Clamp Front Cover Assy.</b>	<b>1 Set</b>
	① 01-0105-16	Hex Socket Round Head Screw M5X16	4
	<b>S1-TBA1-00</b>	<b>Clamp Main Part Assy.</b>	<b>1 Set</b>
	① S1-TB02-01	Rotational Axis Bushing	2
	② S1-TB02-02	Rotary Fastener	2
	③ <b>S1-TB02-05</b>	<b>SPIRIT 1.0 Clamp Base Anode</b>	<b>1 Set</b>
	01-0504-10	Phillip Countersunk Head Screw M4X10	2
	<b>S1-TB06-00</b>	<b>Trim Assy.</b>	<b>1 Set</b>
6	④ <b>S1-TB06-A1</b>	<b>Trim Limiting Stopper Assy.</b>	<b>1 Set</b>
	S1-TB06-01	Trim Limiting Stopper	1
	05-0205-00	E-Shaped Circlip Φ5	1
	S1-TB06-02	Trim Stopper Slide Shaft	1
	S1-TB06-03	Pressure Spring for Trim Limiting Stopper	1
	S1-TB06-04	Anti-Vibration Pressure Spring	1
	03-0104-08	Nylon Washer M4X8X1	2
	02-0104-00	Hex Locknut M4	1
	<b>SE-TB06-00</b>	<b>Bracket Clamp Right Assy. Evo</b>	<b>1 Set</b>
7	① <b>S1-TB03-A1</b>	<b>Clamp Tightening Handle Assy.</b>	<b>1 Set</b>
	a S1-TB03-05	Clamp Tightening Handle	1
	b 04-0204-25	Rolled Spring Pin Φ4X25	1
	<b>S1-TB10-00</b>	<b>Bracket Fixing Axis Assy.</b>	<b>1 Set</b>
8	① 02-0104-00	Hex Locknut M4	4
	② 03-0704-00	Hard Nylon Washer M4	4
9	SE-TB07-00	Product Label Evo	1
10	SE-TB01-00	SPIRIT 1.0 Evo Clamp Anode Evo	1 Set

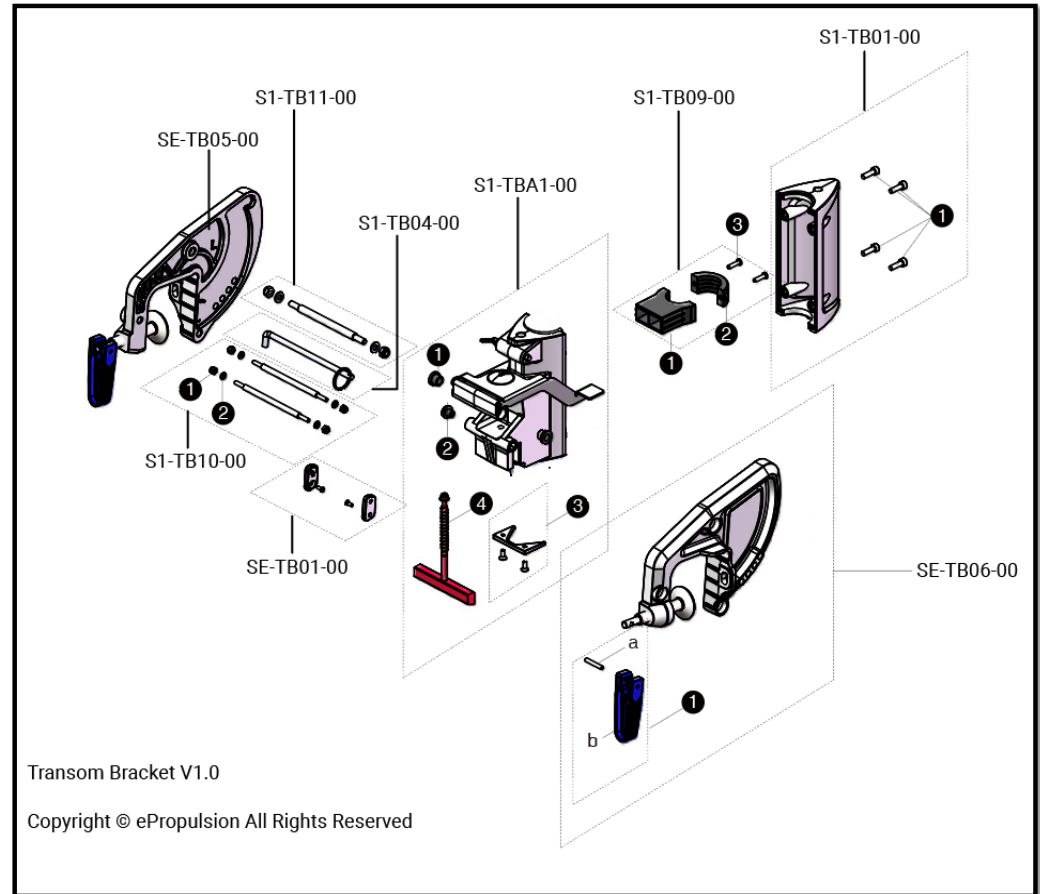

*Accessories*

NO.	PART NO.	DESCRIPTION	QTY.
1	<b>SP-C001-00</b>	<b>SPIRIT 1.0 Plus Charger</b>	<b>1 Set</b>
	① S1-C001-01	Power Cable for Charger-EU	1
	② S1-C001-02	Power Cable for Charger-US	1
	③ S1-C001-03	Power Cable for Charger-EN	1
	④ S1-C001-04	Power Cable for Charger-AU	1
	⑤ S1-C001-05	Power Cable for Charger-CN	1
2	<b>SP-CM01-00</b>	<b>Plus Power Cable Maintenance Set</b>	<b>1 Set</b>
	① SP-CM02-00	Plus Power Cable Maintenance Connector	1
	② S1-CM01-04	Heating Shrinking Tube Φ4.0	2
	③ S1-CM01-03	Heating Shrinking Tube Φ2.0	4
3	S1-CM02-00	Power Cable Locked Nut (Maintenance)	1 Set
4	① SP-M012-00	SPIRIT 1.0 Plus Shaft Anode	1 Set
	② SP-M013-00	SPIRIT 1.0 Plus Motor Anode	1 Set
	③ SE-TB01-00	SPIRIT 1.0 Evo Clamp Anode	1 Set
	SE-TB02-00	SPIRIT 1.0 Evo Clamp Anode Left	1
	SE-TB03-00	SPIRIT 1.0 Evo Clamp Anode Right	1
	01-0504-10	Phillip Countersunk Head Screw M4X10	2
	④ S1-TB02-05	SPIRIT 1.0 Clamp Base Anode	1 Set
5	00-0601-09	SPIRIT 1.0 Plus Extension Power Cable 2m	1
6	S1-CM06-00	SPIRIT Battery Information Reading Cable	1
7	P1-AC03-E0	Evo_Bootloader Downloader	1 Set
8	S1-JG01-00	Jig for Removing Rotor Bearing	1
9	P1-JG01-00	Jig for Removing Propeller	1
10	SP-PD01-00	Plus Driver Board Program Downloader	1
11	SE-BB13-00	Tiller Shaft Lanyard Evo	1
12	S1-BA00-00	Spirit Battery Activator	1