



Motor Parts

No	Part no.	Description	Qty.
\	SP-M001-X0	Plus Motor Main Part Extra Shortshaft w/o Propeller	1 Set
\	SP-M001-S0	Plus Motor Main Part Shortshaft w/o Propeller	1 Set
\	SP-M001-L0	Plus Motor Main Part Longshaft w/o Propeller	1 Set
1	SP-M003-X1	Plus Power Cable Extra Short (Small Connector)	1 Set
	SP-M003-S1	Plus Power Cable Short (Small Connector)	1 Set
	SP-M003-L1	Plus Power Cable Long (Small Connector)	1 Set
	SP-M003-X0	Plus Power Cable Extra Short (Big Connector)	1 Set
	SP-M003-S0	Plus Power Cable Short (Big Connector)	1 Set
	SP-M003-L0	Plus Power Cable Long (Big Connector)	1 Set
		SP-M024-00	Power Cable Connector Cap Assy.
2	SP-BC01-00	Plus Motor Cover	1
	① 01-0104-10	Hex Socket Round Head Screw M4X10	2
3	06-0190-19	O Ring φ90x1.9	2
	SP-M006-00	Plus Rotor Assy.	1 Set
4	① SP-M007-00	Plus Rotor	1 Set
	② 07-0260-01	Deep Groove Ball Bearing 6001ZZ	1
	SP-M008-00	Driver Cooling Block Set	1 Set
5	① 01-0104-12	Hex Socket Round Head Screw M4X12	8
	② 01-0905-12	Hexalobular Socket Countersunk Head Screw M5X12	1
	③ SP-M009-00	Rotor Axial Limit Ring	1
	④ 07-0352-00	Double-Row Angular Contact Ball Bearing 5200ZZ	1
	⑤ SP-M010-00	Driver Cooling Block	1
	⑥ SP-M021-00	Bearing Lock Ring	1
6	SP-M016-00	Three-phase Line Pass Line Sleeve	1
7	08-1222-05	Oil Seal TC12X22X5	2
	SP-M014-01	Oil Seal Cover Set V1.0	1 Set
8	① SP-M015-00	Oil Seal Cover	1
	② 01-0404-08	Phillip Pan Head Screw M4X8	4
	SP-M013-00	SPIRIT 1.0 Plus Motor Anode	1 Set
9	① 03-0304-00	Spring Washer M4	1
	② 01-0104-10	Hex Socket Round Head Screw M4X10	1
	SP-M017-00	Plus Driver Assy.	1 Set
10	① 01-0103-10	Hex Socket Round Head Screw M3X10	4
	② 01-0103-05	Hex Socket Round Head Screw M3X5	5
	③ SP-M018-00	Plus Driver	1
	④ SP-M019-00	Plus Driver Silicone Thermal Pad	1
11	SP-M020-00	Power Cable Pass line Rubber Part	1
	S1-M001-00	SPIRIT 1.0 Propeller	1 Set
12	① 02-0110-00	Hex Locknut M10	1
	② 03-0510-00	Disc Washer M10	1
	③ 04-0103-25	Pin Φ3X25	1
	④ 03-0210-20	Plain Washer M10X20X2.0	1
	SP-M012-00	SPIRIT 1.0 Plus Shaft Anode	1 Set
13	① 03-0305-00	Spring Washer M5	1
	② 01-0105-12	Hex Socket Round Head Screw M5X12	1
14	SP-M022-00	Stream Deflector Rubber Upper	1
15	SP-M023-00	Stream Deflector Upper Lock	1

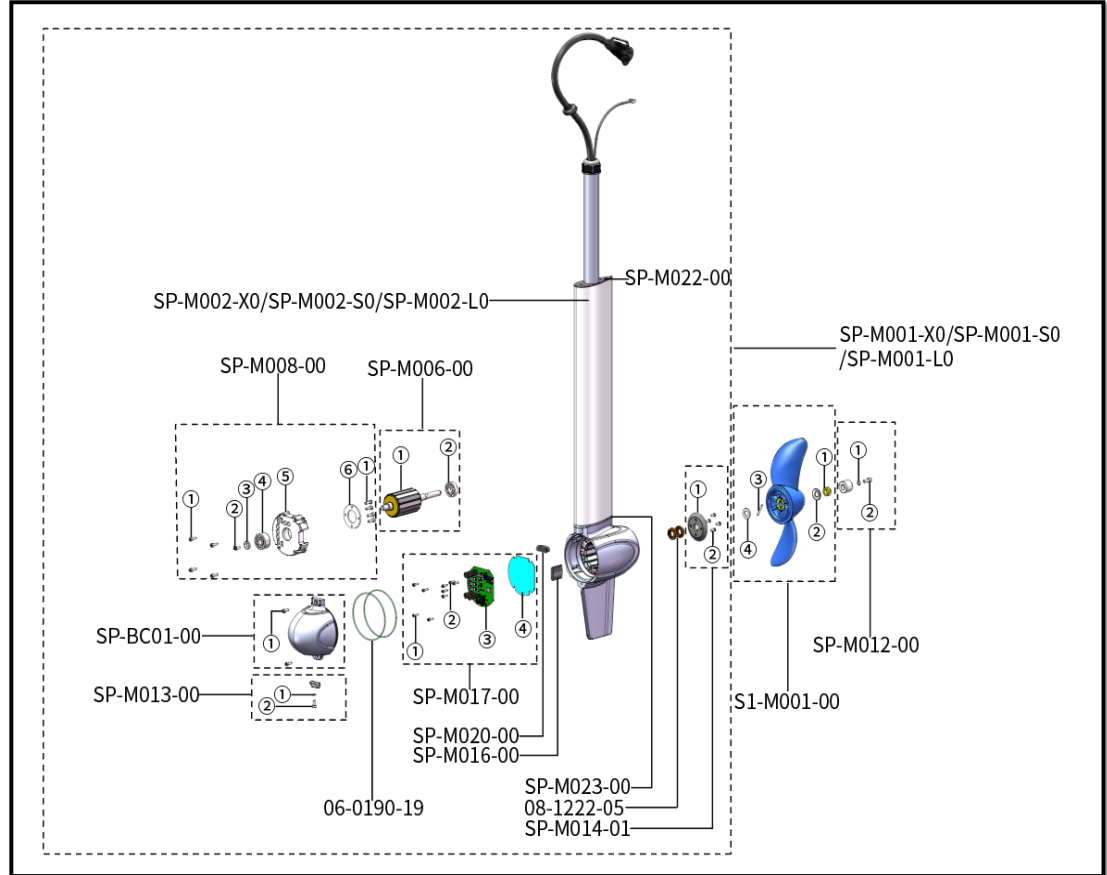


Battery Parts

No	Part no.	Description	Qty.
\		SPIRIT Battery Plus	1 Set
1	SP-B001-00	Plus Discharge Connector Assy.	1 Set
	S1-B002-03	Discharge Connector Cap	1
	SP-B002-00	Plus Discharge Connector	1 Set
2	SP-B011-00	BMS Flat Cable (Plus)	1 Set
3	SP-B003-00	Plus Charge Connector Assy.	1 Set
	S1-B001-03	Charge Connector Cap	1
	SP-B004-00	Plus Charge Connector	1 Set
4	S1-B004-00	Battery Top Case Assy.	1 Set
	S1-B005-00	Battery Lock Assy.	1 Set
	S1-B003-00	Charge Indicator Assy.	1 Set
5	SP-B005-00	Plus BMS Assy.	1 Set
	① 01-1504-10	Phillip Truss Head Tapping Screw M4X10	4
6	SP-B006-00	Plus Battery Cell Assy.	1 Set
7	S1-B009-01	Battery Sealing Ring	1 Set
8	S1-B010-00	Battery Bottom Case Assy.	1 Set
	① 01-1504-16	Phillip Truss Head Tapping Screw M4X16	24

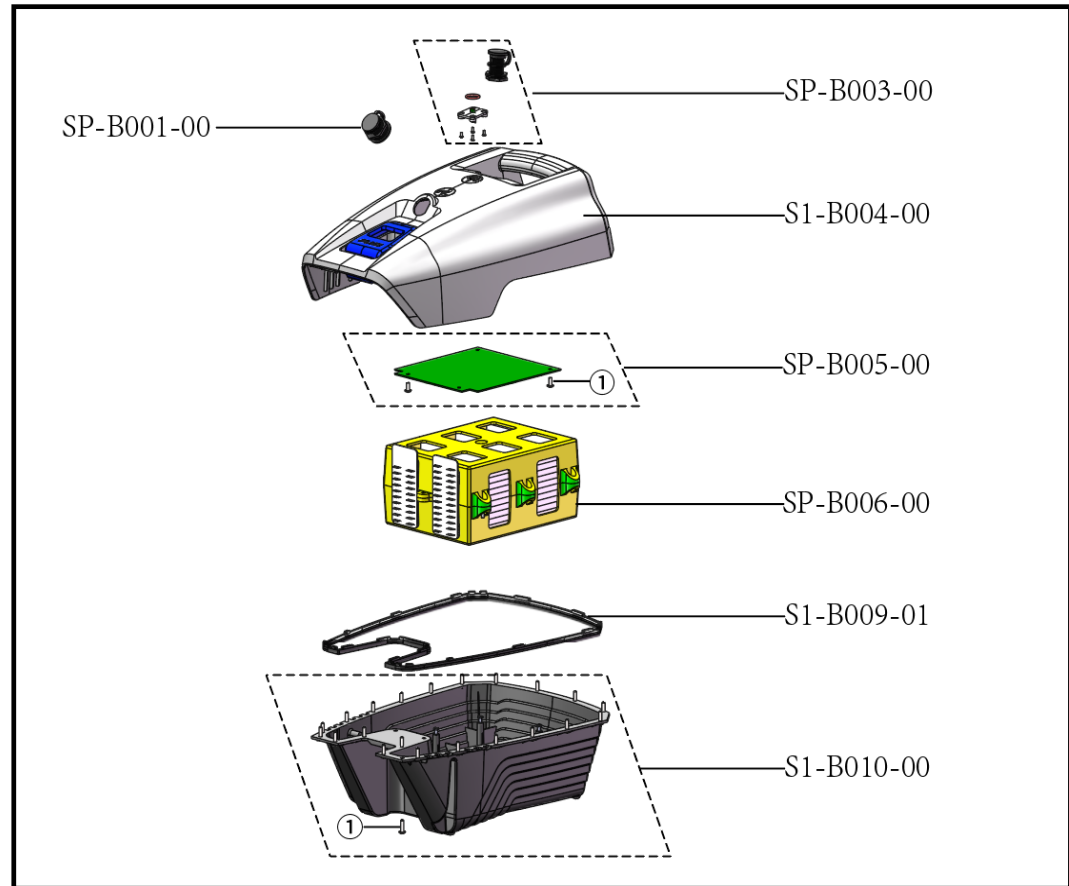


Tiller Handle Parts

No	Part no.	Description	Qty.
	SP-TH00-00	Plus Tiller Handle	1 Set
		All the Battery Base Assy. (No.4\5\6\7) are not included	
1	S1-TH01-A1	Throttle Tube Assy.	1 Set
2	S1-TH01-A2	Hall Magnet Base Assy.	1 Set
	① 01-0525-06	Phillip Countersunk Head Screw M2.5X6	1
3	S1-TH07-01	Membrane Switch Panel English Version	1
4	SP-TH04-00	Plus Battery Base Left	1
5	S1-TH06-01	Steering Lock Pin	1
	SP-TH05-00	Plus Battery Base Right Assy.	1 Set
	① 01-0104-35	Hex Socket Round Head Screw M4X35	1
	② 01-0106-25	Hex Socket Round Head Screw M6X25	1
	③ 01-0706-08	Set Screw M6X8	2
7	S1-TH08-01	Handle Tension Spring	1
	S1-TH03-00	Handle Rotational Axis Assy.	1 Set
	① S1-TH03-01	Fastener for Handle Rotational Axis, Left	1
	② S1-TH03-02	Fastener for Handle Rotational Axis, Right	1
	③ S1-TH03-03	Handle Rotational Axis	1
	SP-TH01-00	Plus Throttle Handle Case Assy. w/Lens	1
	① 01-1717-05	Phillip Countersunk Flat Tail Tapping Screw M1.7X5	14
	② S1-TH07-02	Lens for LCD Panel	1
	③ S1-TH07-03	Screen Sealing Ring	1
	④ S1-TH07-04	Screen Button Cover	1
	SP-TH02-01	Plus Throttle Handle Control Panel Assy. (Two Connectors)	1 Set
	S1-TH11-00	Throttle Handle Control Panel Assy. (Big Connector)	1 Set
	① 01-2526-05	Phillip Pan Head Flat Tail Tapping Screw M2.6X5	6
	S1-TH13-00	Handle Sealing Box Assy.	1 Set
	① S1-TH13-01	Waterproof Connector M10	1
	② S1-TH13-02	Handle Sealing Box	1
	③ 10-0112-15	Vent	1
	④ 01-1522-10	Phillip Truss Head Tapping Screw M2.2X10	12
	S1-TH14-00	Handle Tube Pressure Plate Assy.	1 Set
	① 01-1504-20	Phillip Truss Head Tapping Screw M4X20	2
	② S1-TH14-01	Handle Tube Pressure Plate, Lower	1
	③ S1-TH14-02	Handle Tube Pressure Plate, Upper	1
13	S1-TH12-01	Handle Sealing Ring	1
	S1-TH15-00	Handle Tube Fastener Assy.	1 Set
	① 01-1504-16	Phillip Truss Head Tapping Screw M4X16	2

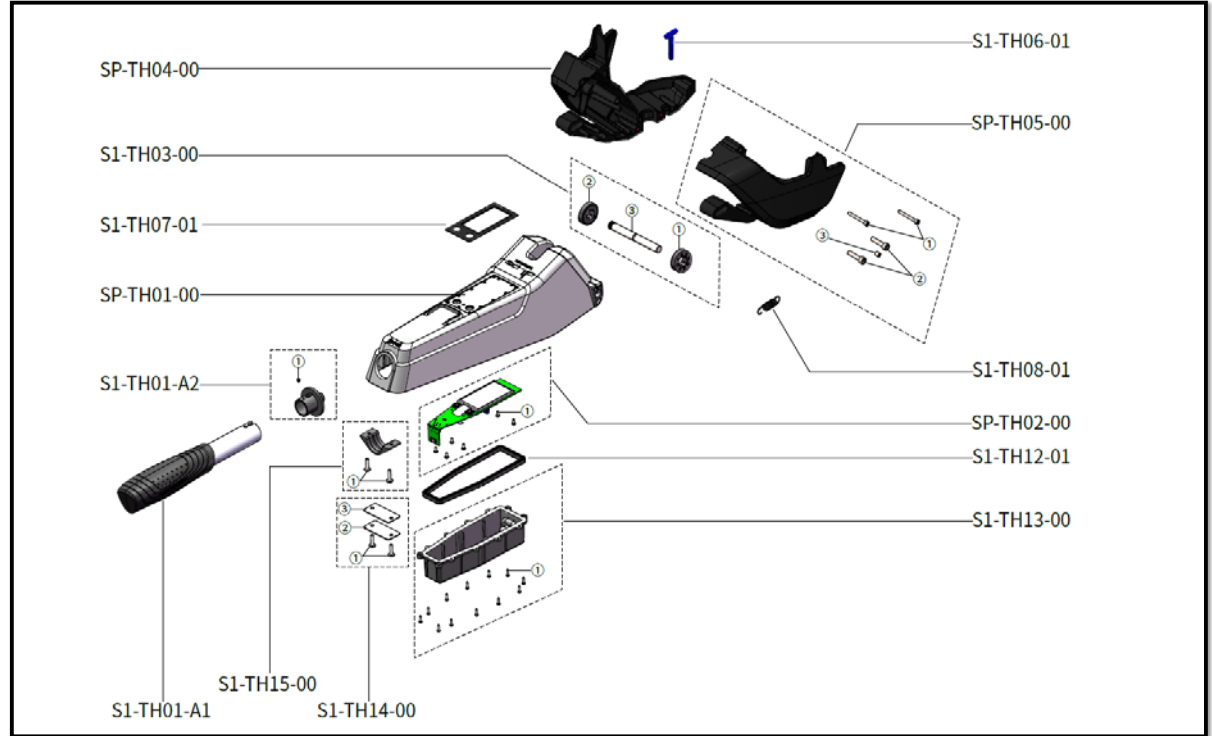

Transom Bracket Parts

No.		Description	Qty.
\	S1-TB00-00	Transom Clamp	1 Set
1	SP-TB00-00	Plus Bracket Clamp Left Assy.	1 Set
2	S1-TB11-00	Bracket Rotational Axis Assy.	1 Set
	02-0106-00	Hex Locknut M6	2
3	03-0706-00	Hard Nylon Washer M6	2
	S1-TB04-00	Trim Pin & Pull Ring Assy.	1 Set
4	S1-TB04-01	Pull Ring for Trim Pin Φ25	1
	S1-TB09-00	Steering Resistance Block Assy.	1 Set
	S1-TB09-01	Resistance Block Base	1
	S1-TB09-02	Resistance Block Cover	1
5	01-0304-16	Phillip Pan Head Tapping Screw M4X16	2
	S1-TB01-00	Clamp Front Cover Assy.	1 Set
	01-0105-16	Hex Socket Round Head Screw M5X16	4
	S1-TBA1-00	Clamp Main Part Assy.	1 Set
	S1-TB02-01	Rotational Axis Bushing	2
	S1-TB02-02	Rotary Fastener	2
	S1-TB02-05	SPIRIT 1.0 Clamp Base Anode	1 Set
	01-0504-10	Phillip Countersunk Head Screw M4X10	2
	S1-TB06-00	Trim Assy.	1 Set
	6	④ S1-TB06-A1	Trim Limiting Stopper Assy.
S1-TB06-01		Trim Limiting Stopper	1
05-0205-00		E-Shaped Cirelip Φ5	1
S1-TB06-02		Trim Stopper Slide Shaft	1
S1-TB06-03		Pressure Spring for Trim Limiting Stopper	1
S1-TB06-04		Anti-Vibration Pressure Spring	1
03-0104-08		Nylon Washer M4X8X1	2
02-0104-00		Hex Locknut M4	1
7	SP-TB01-00	Plus Bracket Clamp Right Assy.	1 Set
	S1-TB03-02	Product Label	1
	S1-TB03-A1	Clamp Tightening Handle Assy.	1 Set
	a S1-TB03-05	Clamp Tightening Handle	1
b 04-0204-25	Rolled Spring Pin Φ4X25	1	
8	S1-TB10-00	Bracket Fixing Axis Assy.	1 Set
	02-0104-00	Hex Locknut M4	4
	03-0704-00	Hard Nylon Washer M4	4
9	SE-TB01-00	SPIRIT 1.0 Evo Clamp Anode Evo	1 Set
	① SE-TB02-00	SPIRIT 1.0 Evo Clamp Left Anode Assy.	1
	② SE-TB03-00	SPIRIT 1.0 Evo Clamp Right Anode Assy.	1

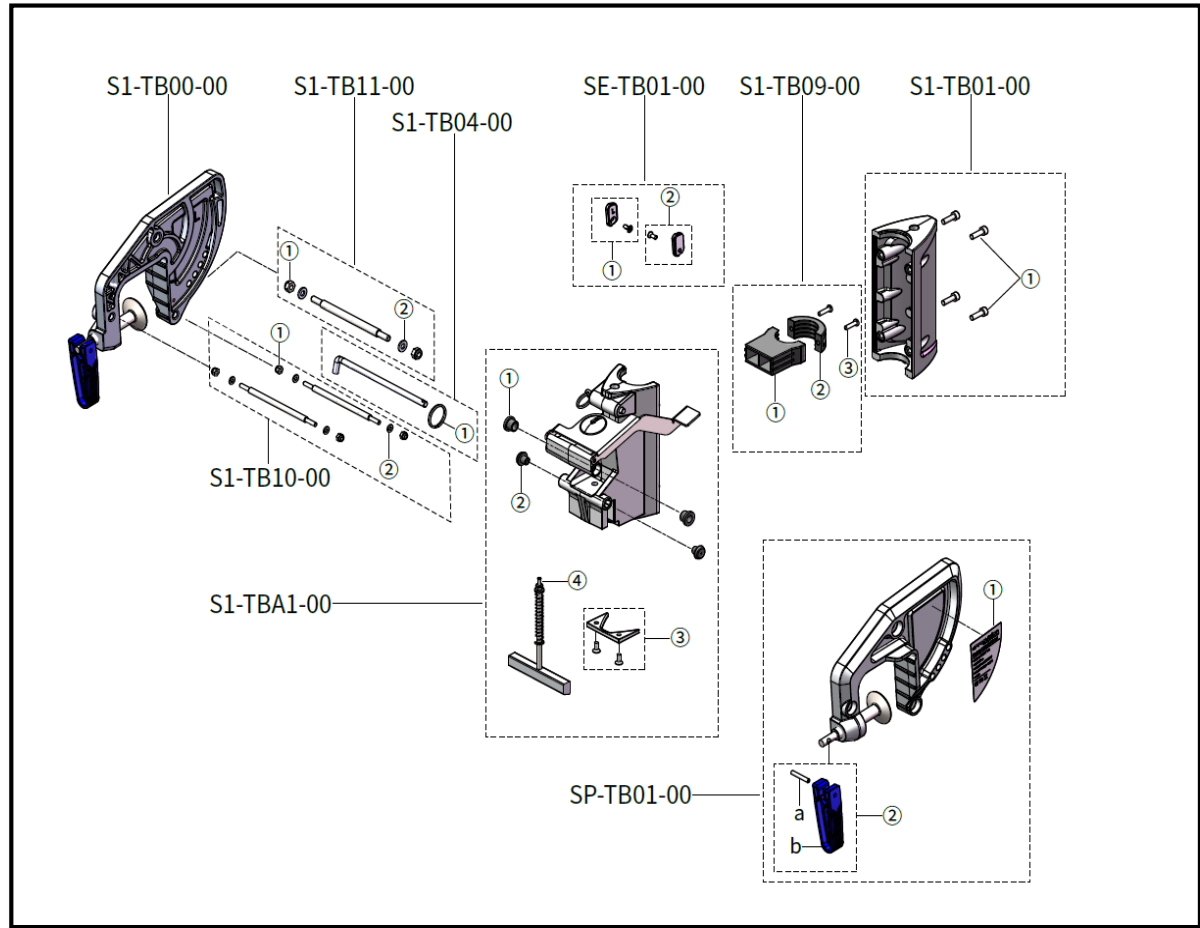

Accessories

NO	PART NO.	DESCRIPTION	QTY.
1	S1-BG00-00	SPIRIT 1.0 Bag Set	1 Set
	S1-BG01-00	SPIRIT 1.0 Outboard Bag	1
	S1-BG02-00	SPIRIT 1.0 Battery Bag	1
2	SP-C001-00	SPIRIT 1.0 Plus Charger	1 Set
	① S1-C001-01	Power Cable for Charger-EU	1
	② S1-C001-02	Power Cable for Charger-US	1
	③ S1-C001-03	Power Cable for Charger-EN	1
	④ S1-C001-04	Power Cable for Charger-AU	1
	⑤ S1-C001-05	Power Cable for Charger-CN	1
3	SP-CM01-00	Plus Power Cable Maintenance Set	1 Set
	① SP-CM02-00	Plus Power Cable Maintenance Connector	1
	② S1-CM01-04	Heating Shrinking Tube Φ4.0	2
	③ S1-CM01-03	Heating Shrinking Tube Φ2.0	4
4	S1-CM02-00	Power Cable Locked Nut (Maintenance)	1 Set
5	S1-TH02-00	Kill Switch Assy.	1 Set
6	00-0601-09	SPIRIT 1.0 Plus Extension Power Cable 2m	1
7	S1-CM05-00	SPIRIT Remote Control Charging Cable	1
8	S1-CM06-00	SPIRIT Battery Information Reading Cable	1
9	S1-JG01-00	Jig for Removing Rotor Bearing	1
10	P1-JG01-00	Jig for Removing Propeller	1
11	SP-PD01-00	Plus Driver Board Program Downloader	1
12	SP-M005-00	Spirit Motor Cowling	1 Set
13	SP-CM03-00	Power Cable Maintenance Set (Metal, 300mm)	1 Set
14	S1-BA00-00	Spirit Battery Activator	1
15	S1-BA02-00	T connector	1

Only available in sets